



Danfoss


INSTRUCTIONS

Gland seal for RA-C valve




013R9292

1)

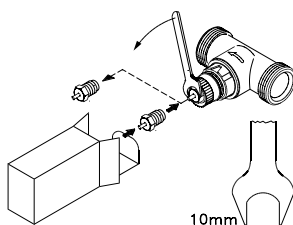

 2)



013R9292

- Ⓚ Kan udskiftes under drift. Husk tæthedskontrol.
- ⓖ Can be replaced during operation. Don't forget leak inspection.
- ⓓ Während des Betriebs auswechselbar. Dichtigkeitskontrolle nicht vergessen.
- ⓕ Le remplacement peut se faire en cours de marche. Penser au contrôle d'étanchéité.
- Ⓢ Kan bytas under drift. OBS - täthetskontroll.
- Ⓝ Kan tijdens bedrijf vervangen worden. Vergeet niet op dichtheid te controleren.
- ⓕ Voidaan vaigtaa käytön aikana. Muista tiiviyskoe.

DKCD

01-2000 VI.36.A1.6J